Caution: Please be sure to cut off the power supply after use.

Insturctions

SMART BINDING RELAXED FINANCING



Smart Currency Binding Machine

8、Attention

1 This product can only be used for binding.
2 Should ensure that the product away from the sun, water, dust and strong magnetic field.
3 This product can only be carried out by a professional service.
4 Before replacing the fuse to turn off the power switch and disconnect the power cord.
5 Machines in use to avoid falling damage.
6 At work should not put hands to the work of warehouse.
7 Coins and other objects should not be placed within the working storage
8 Should't use organic solvents such as alcohol and other chemicals to clean the machine casing.

9、The machine installs

Packing list		
Designation	Unit	Qty
Binding machine	Pcs	1
Power line	Pcs	1
Instructions	Pcs	1
Bank note	Pcs	1
Fuse wire	Pcs	2
Tweeze	Pcs	1



4、Product parameters

＊Bundle note range:Apply to the notes
＊Binding speed : ≤1.5seconds / once
＊Power : AC100V-240V/47-63Hz
＊Standby power： ≤10W， Max power： ≤60W
＊Noise : ≤70DB Weight : N.T 6KG W.T 6.5KG
＊Paper wide ： 30MM
＊Dimensions： 240*200*220MM

5、Fast operate

1 Install paper note

The superstructure of the machine open ,binding tape sets as shown in column 3 of the lateral direction,leads to take the lead ,this time pay attention to the direction with the installation disk to comply with case cited above diagram.



2、Power supply

Access to power, and press the Power switch to "ON" position, the machine automatically enters the working state.

3、Covertape

Will take the lead through the guide wheel A, without paper detection sensor, by passing the lateral guide rollers B, C and loaded by the guide rollers into the band mouth, pressing the enter key then automatically finished the actions.

4、Bind

Put the notes will be counted into the work position, the closely aligns the left side of the pressure plate notes, notes contact with the front baffle with the limit, photoelectric switch sensor to the notes already in place, the control system automatically binding action.

5、Complete

When the band heard the collection, Adjacency voice prompt action to complete, remove the tie a good note, the end of a bundle。

6、ON/OFF

This machine has automatic and manual shutdown functions.

⚠Manual Shutdown: Users can use the power switches on or off.
Long time do not unplug the power cord.

6、Setup and resize

Press "reset" key for three seconds, when the temperature is worth to change in to 100 from 00，it's say show the machine has already entered to testing a status.

Temperature =00 is tightness adjustment: (Factory value=19) Press the value that"up, down" key input needs, value range(6-60) the value is more big, the interference is more tight, whereas more loose.Then press"back paper" key again to set item switch.

Temperature =01 is Enter paper length conditioning :(Factory value=3) Press the value that"up, down" key input needs, value range(0-10) The value is more big, index numbers of quantum, imports or exports paper length more long, contrarily more short, Then press"back paper" key again to set item switch.

Temperature =02 is Start optics the eye sensitivity regulate: (Factory value=19) Press the value that"up, down" key input needs, value range(3-60) Value the more big reaction is more dull, whereas more intelligent, Then press"back paper" key again to set item switch.

Temperature =03 is The high and low temperature working mode switching (Factory value=1,High temperature state) Press the value that"up, down" key input needs, value range(0-1) ,0 for works at low temperature,1 for works at high temperature.Press again " back paper" key to set item switch.

Temperature =04 is Have no paper examination to spread a feeling machine: (Factory value=13) Press the value that"up, down" key input needs, value range(10-40) The value is more big, index numbers of quantum, imports or exports paper length more long, contrarily more short, Then press"back paper" key again to set item switch.

Temperature =05 is Display mode setting: press to enter oneself to circulate a status and carry on machine to grind to match"up" the key machine.Press the "down" key, can in progress English display cutover.

Temperature =06 is Circulate mode setting: Tie to display number of times to 1 while clicking for a while "up" the key, the machine will have a holdup phenomemon in the run - time at this time and make the paper tape loosen after gluing the connecting section is firm to open; Press"down" key, tie to display number of times to 0, the machine circulates under the routine.

Binding of different denominations of notes, use the right gear knob adjusted accordingly.

7、Denominations adjustment

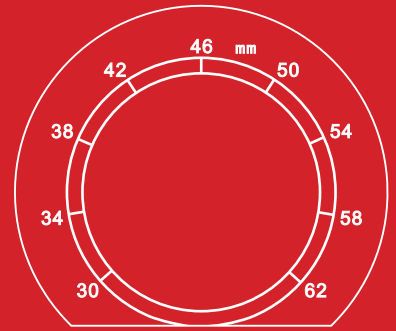

SMART BINDING MACHINE

1、Binding machine structure picture



2、Display screen show

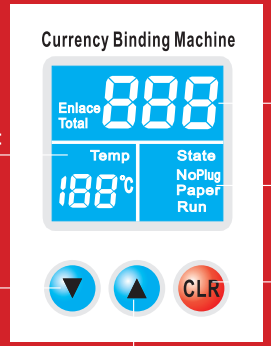

3、Product funtions

- ＊Instant heat :No warm-boot,open then can direct use
- ＊Set up a simple：Demand on the heating temperature can be set
- ＊Easy to operate：Please put the notes vertically into entrance,then automatically finished the action.
- ＊Show function: chinese,english shows for global, The machine functions, failure at a glance, Users can exclude their operation, Reduce the probability of repair, Improve user productivity.
- ＊General Supplies：Users can adjust by setting the temperature of hot pressing to meet the different use of paper tape,low temperature tape temperature between 100-150 degrees,high temperature tape temperature between 150-180 degrees;how to operate, please see the article 6 of the set up and adjust.

• Protect to fix an unipole •

My company all of the best product servce and welcome large customer to use

1 The product of our company protects to fix the term as annum and life long support

2 Our company adopts active type regular audit to combine a maintenance and attains and discovers a question on one's own initiative and availably prevent□froms question occurrence in time and actively hears consumer's opinion and monitor service mass

3 The product results in because of the factitiousness of user failure, our company is responsible for mending, but appropriate fee charging

4 Regularly be responsible for a maintenance repairs inspection

Shut down the machine appear fault, please hard be alongside of according to the fault removal method inspection in the manual in addition to, if still the incapability expel, please fill in the bottom table, soon send my company in order to contact

Date of purchase commodity:

Denomination and model number:

Name of user :

Mailing address:

TEL:

Break down aphenomemon:

Denomination and model number:

Name of user:

Mailing address:

TEL:

Break down aphenomemon: